




TRANZITIONS

CHILD RESTRAINT/BOOSTER SEAT

Read This Instruction Manual

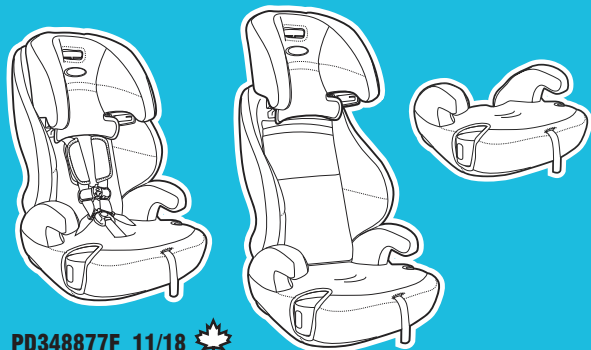

PD348877F 11/18 

Do not install or use this child restraint until you read, understand and follow the instructions in this manual and the warnings on the seat.

FAILURE TO PROPERLY USE THIS CHILD RESTRAINT INCREASES THE RISK OF SERIOUS INJURY OR DEATH IN A SUDDEN STOP OR CRASH.

1 Important

Pages 6-22

1-A Quick Guide to Your Manual

1-B Welcome to the Graco Family

1-C Right Mode of Use

1-D Before You Begin

Register This Car Seat

If You Need Help

Certification

Airplane Installation

Car Seat's Useful Life

Vehicle Seat Protection

Warm Weather Use

1-E Safety Warnings

2 Features

Pages 23-29

2-A Cup Holder

2-B Car Seat Features

3 Forward-Facing with Built in Harness

Pages 30-41

3-A Forward-Facing Use

3-B Install Forward-Facing with UAS Straps

3-C Install Forward-Facing with the Vehicle Seat Belt

4 Booster

Pages 42-52

4-A Booster Use

4-B Install Backed Booster

4-C Install Backless Booster

5 Securing Child

Pages 53-69

- 5-A Securing Child 5-Point Harness**
- 5-B Securing Child Backed Booster**
- 5-C Securing Child Backless Booster**

6 Accessories

Page 70

7 Vehicle Information

Pages 71-81

- 7-A How to Remove UAS and Top Tether**
- 7-B Choosing Vehicle Seat Location**
- 7-C Unsafe Vehicle Seat Location**
- 7-D Vehicle Seat Belts**

8 Care & Cleaning

Pages 82-86

- 8-A Cleaning Seat Pad**
- 8-B Cleaning Buckle Strap**
- 8-C Cleaning Harness and UAS Strap**



1 Important

1-A Quick Guide to Your Manual

This car seat is for children: *Forward-Facing: 10-30 kg (22-65 lb)*

69-125 cm (27-49 in.)

Booster: 18-45 kg (40-100 lb)

110-145 cm (43-57 in.) and at least 4 years old

Get to Know Your Car Seat

Review section 2-B to see all of the features of this car seat.

What Seating Location Should I Use?

The best seating location for this car seat is one that:

- Is recommended by your vehicle owner's manual, and
- Results in a secure installation of this car seat.

Some vehicles have specific requirements for where the car seat can be installed, so be sure to check your vehicle owner's manual for available seating positions, if any.

For example, sometimes the center rear seat has a lap belt only vehicle seat belt, which cannot be used when this car seat is in Booster mode.

Review section 7-B, 7-C of this manual AND your vehicle owner's manual.

According to collision statistics, the safest place for your child in any vehicle is the back seat. The center of the back seat can be the safest during a possible side impact.



i 1 Important

Which Installation Method Should I Use?

This car seat can be installed in your vehicle using either the vehicle seat belt OR the Universal Anchor System (UAS). DO NOT USE BOTH AT THE SAME TIME when using the internal harness.

Vehicle Seat Belt: Review section 7 and your vehicle owner's manual to learn how to install your car seat with the vehicle seat belts.

UAS : The UAS system allows you to securely attach your car seat in your car without using the vehicle seat belt. All 2003 and newer model year vehicles are required to have a UAS, although some manufacturers began including them earlier. Some vehicle owner manuals use the term ISOFIX to identify the UAS.

What is UAS?


UAS consists of lower anchor bars and a tether anchor bar, which are built-in to your vehicle, and connecting hooks that are built-in to your car seat. Lower anchors are used **INSTEAD** of the vehicle's seat belt to secure the child seat to the vehicle. The tether is used **IN ADDITION** to the lower anchors **OR** the vehicle's seat belt to secure a forward-facing car seat to the vehicle.

Review your vehicle's owner manual for exact location and use.

**Vehicle Tether
Anchorage Points**



Vehicle Seat Bight

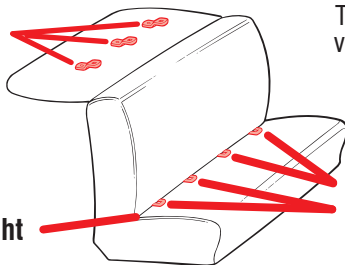

Typical seat in a passenger vehicle. Other vehicle types may have different lower anchor bar locations.

**Vehicle Lower
Anchor Points**





Using The Car Seat Correctly

To make sure your child is secured properly, review section 3 and 4 to fit your child.

When Installing Forward-Facing


UAS System

UAS consists of lower anchors, which are built-in to your vehicle, and connecting hooks that are built-in your car seat. Review section 3-B of this manual AND your vehicle owner's manual.

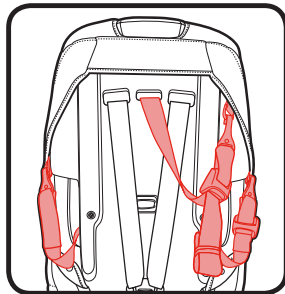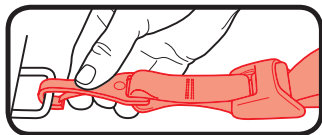

Vehicle Seat Belt

There are two types of vehicle seat belts that can be used. Lap/Shoulder Seat Belt or Lap Only Seat Belt. Review section 3-C of this manual AND your vehicle owner's manual.

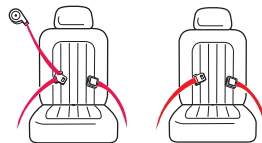


i 1 Important

For Forward-Facing, You Need to Adjust:


Harness Height, Forward-Facing (A)

Harness straps at or just above the child's shoulders and top of child's ears below top of headrest **(B)**. Review section 5.

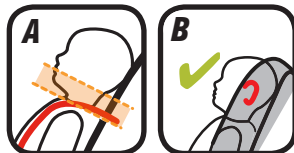


Buckle Position (C)

The correct slot is the one that is closest to your child without being underneath them. Review section 5.

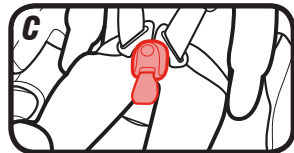

Harness Tightness (D)

If your fingers slide off the harness straps without pinching the straps, it is tight enough. Review section 5.

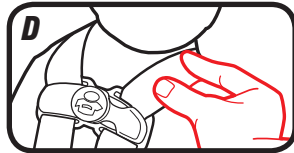

Forward-Facing Installation

Use the tether when using forward-facing (A)

When used properly, the tether helps reduce injury in a sudden stop or crash.

Review section 3

Car Seat Does Not Move More than 2.5 cm (1 in.) at the Belt Path (B)

Review section 3

Harness Straps at or Just Above Child's Shoulders (C)






Review section 5

Chest Clip Even With Armpits (D)

Review section 5

Cannot Pinch Harness Straps at the Shoulder (E)

Review section 5

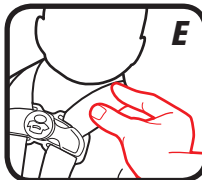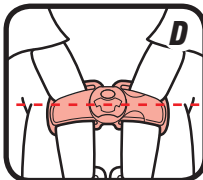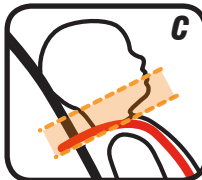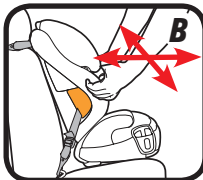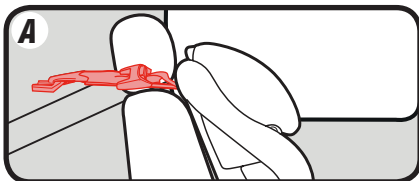

1 Important


1 Important

When Installing As a Booster

Vehicle Seat Belt

Only use the Lap/Shoulder seat belt configuration.

Review section 4-B, 4-C of this manual AND your vehicle owner's manual.

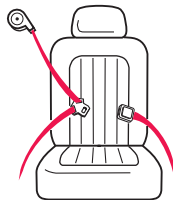

For Booster, You Need to Adjust:


Use Lap/Shoulder Belt Only

Position Lap Belt

Lap belt must go in front of armrest and lie low across your child's hips and thighs.

Position Shoulder Belt



Shoulder best lies across shoulder between neck and edge of shoulder.

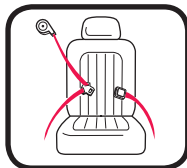

Highback



Backless

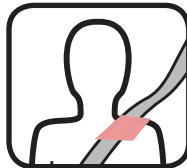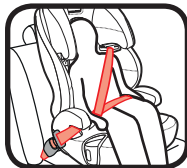

i 1 Important

Booster Installation

Never Use Lap Belt Only

Review section 4




Highback



Backless

Lap Belt In Front of Armrest and Lies Low Across Hips and Thighs

Review section 4

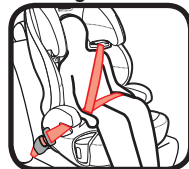

Shoulder Belt Lies On the Shoulder, Between the Neck and Edge of Shoulders

Review section 4



1-B Welcome to the Graco Family!

Your child's safety depends on you. No car seat can guarantee protection from injury in every situation, but proper use helps reduce the risk of serious injury or death.

Even if this car seat seems easy to figure out on your own, you must follow the detailed instructions in this instruction manual to ensure all steps are preformed correctly.



1 Important

1-C Right Mode of Use

10 kg
(22 lb)

18 kg
(40 lb)

30 kg
(65 lb)

45 kg
(100 lb)

Forward-Facing with 5-Point Harness 10-18 kg (22-40 lb), 69-125 cm (27-49 in.), can sit upright unassisted and are at least 1 year old **MUST** be forward facing. 18-30 kg (40-65 lb) **SHOULD** be forward-facing.

High Back Booster Mode with Vehicle Lap/Shoulder Seat Belt 18-45 kg (40-100 lb), 110-145 cm (43-57 in.) **CAN** be in high back booster mode. Over 30 kg (65 lb) **MUST** be in booster mode. Child **MUST** be at least 4 years old.

Backless Booster Mode with Vehicle Lap/Shoulder Seat Belt 18-45 kg (40-100 lb) 110-145 cm (43-57 in.) **CAN** be in booster mode. Over 30 kg (65 lb) **MUST** be in booster mode. Child **MUST** be at least 4 years old.

1-D Before You Begin

Register This Child Restraint

Please fill out the prepaid registration postcard attached to the harness and mail it in today **or register online at www.gracobaby.ca**

Child restraints could be recalled for safety reasons. You must register this restraint to be reached in a recall. Send your name, address, and the restraint's model number and manufacturing date to:

Newell Industries Canada Inc.
P.O. Box 20090 Oaktown Plaza, Oakville, ON L6K 3Y7
or call 1-800-345-4109

For recall information, call the Customer Service in Canada at www.gracobaby.ca or call 1-800-345-4109.



1 Important

For future reference or if you change addresses, record the model name, model number, date of manufacture and purchase date of this car seat on the below. You can find this information either on the registration card if you still have it or on the date label located on the back of the car seat.

Model Name _____

Model Number _____

Date of Manufacture _____

Date of Purchase _____

If You Need Help

Please contact our Customer Service Department with any questions you may have concerning parts, use, or maintenance. When you contact us, please have your product's **model number and date of manufacture** ready so that we may help you efficiently. These numbers can be found on a sticker on the back of your child restraint.

www.gracobaby.ca


1-800-345-4109

Certification

This child restraint meets or exceeds all applicable requirements of Canadian Motor Vehicle Safety Standards 213 and 213.2 for use in motor vehicles.



This child restraint is certified for use in aircraft only when used with the internal harness system. Use only on forward-facing aircraft seats. Follow the instructions for vehicle installation, except to keep tether stored. See section 3-C.

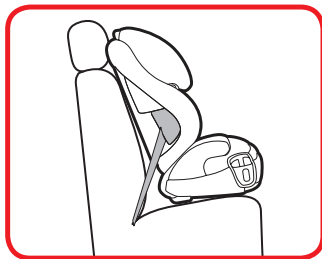

This child restraint is NOT certified for use in aircraft when used as a booster seat because aircrafts do not have shoulder belts.

Contact the airline for their specific policies.



1 Important

Car Seat's Useful Life

STOP using this car seat and throw it away 7 years after the date of manufacture. Look for date of manufacture label on back of the car seat.

Graco Children's Products Inc. advises against loaning or passing along a car seat unless you know the complete history of the product. We also advise against purchasing a car seat second hand.

Vehicle Seat Protection

Protect vehicle seat. Use a car seat mat, towel, or thin blanket under and behind car seat.

Warm Weather Use

Car seat parts can get very hot in the sun or warm weather. **To avoid burns, always check before putting child in car seat.**

1-E Safety Warnings

No car seat can guarantee protection from injury in every situation, but proper use helps reduce the risk of serious injury or death.

READ THIS MANUAL CAREFULLY.

WARNING!

Failure to follow these instructions and child restraint's warnings can result in child striking the vehicle's interior during a sudden stop or crash.



1 Important

- ! Review your vehicle owner's manual for more information about air bags and car seat use.**
- ! If your vehicle does not have a back seat, review your vehicle owner's manual.**
- ! Select a suitable location for the car seat in your vehicle.**
- ! Secure car seat with a vehicle seat belt or UAS that is properly routed as shown in this manual.**
- ! Vehicle seat belt system MUST hold car seat securely. Not all vehicle seat belts can be used with a car seat.**
- ! If vehicle seat belt does not hold car seat securely, read "Vehicle Seat Belts" section 7-D and your vehicle owner's manual.**
- ! Always secure car seat with UAS or a vehicle seat belt, even when unoccupied. In a crash, an unsecured car seat can injure passengers.**
- ! If car seat is in a crash, it must be replaced. DO NOT use it again! A crash can cause unseen damage and using it again could result in serious injury or death.**

 
1 Important

! DO NOT use car seat if it is damaged or missing parts.

! DO NOT use accessories or parts other than those provided by Graco except for a thin towel or mat to protect your vehicle seat. Their use could alter the performance of the car seat.

! DO NOT remove the UAS system from car seat. If using vehicle seat belt to secure car seat, UAS connectors must be stored.

! Never leave child unattended, even when sleeping. Child may become tangled in harness straps and suffocate or strangle.



! Never attach two UAS hooks to one vehicle lower anchor POINT unless specifically allowed by the vehicle manufacturer.



! Do not use both the vehicle seat belt and UAS strap at the same time when using the car seat forward-facing with the built in harness system.

! This restraint system may only be used in these classes of vehicles: passenger cars, multi-purpose passenger vehicles and trucks that have vehicle lap/shoulder belts and tether anchors.

2-A Cup Holder

Cup Holder


To install cup holder, lift cup half out of the cup holder. Rotate cup. Align cup holder tabs with T-slots in shell and slide cupholder into place.

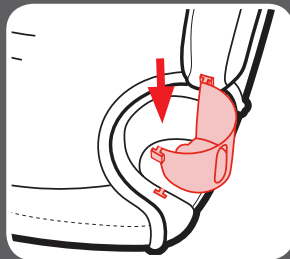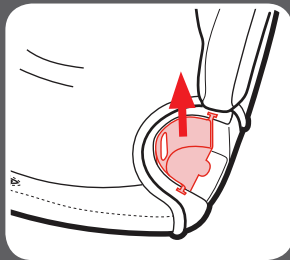

2 Features



2-B Car Seat Features

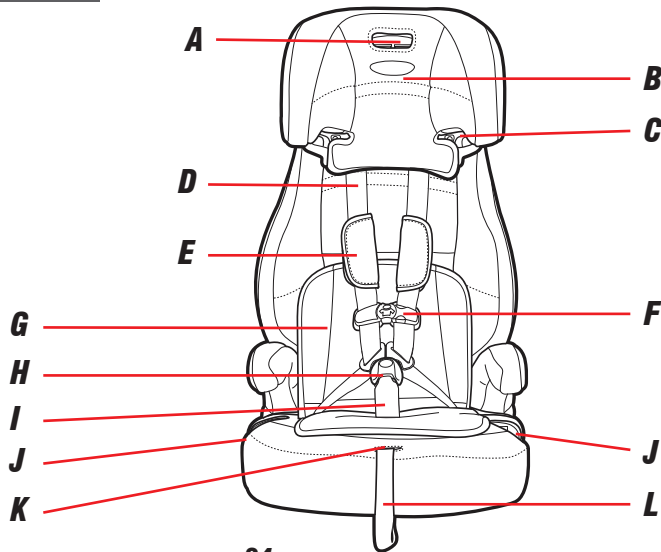


- A** *Height Adjust Lever*
- B** *Head Support*
- C** *Shoulder Belt Guide*
- D** *Harness Strap*
- E** *Harness Covers*
- F** *Chest Clip*
- G** *Body Support*
- H** *Buckle*
- I** *Buckle Strap*
- J** *Cup Holder*
- K** *Harness Adjuster Lever
(Under Seat Pad)*
- L** *Harness Adjustment Strap*





2 Features

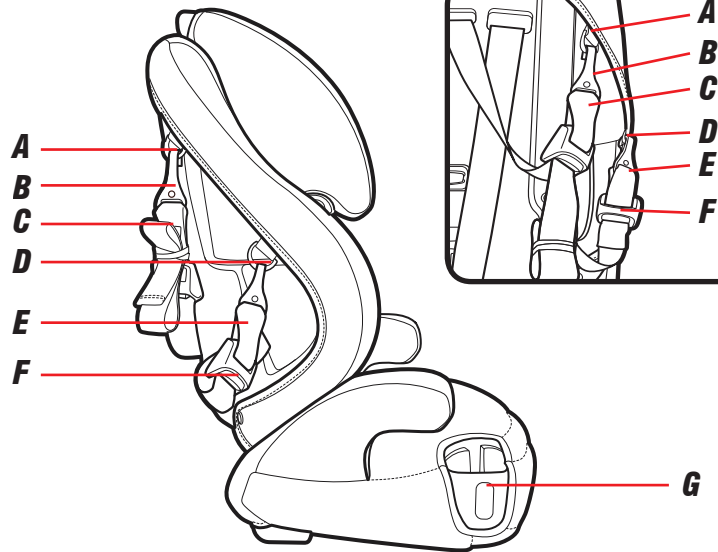



- A Tether Storage Ring**
- B Tether Hook**
- C Tether Strap**
- D UAS Storage Ring**
- E UAS Strap**
- F UAS Adjuster**
- G Cup Holder**

2 Features



B

C

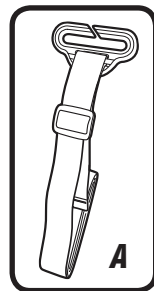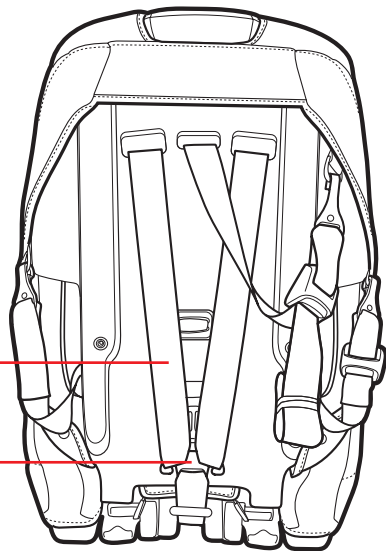


A

A Belt Positioning Clip (Inset)

B Harness Straps

C Splitter Plate

3-A Forward-Facing Use with built in harness

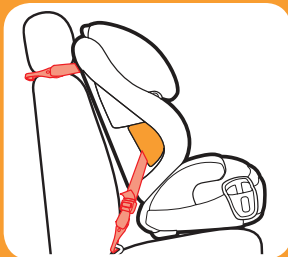

UAS with Top Tether
Do not install with
the UAS connectors
for children weighing
more than 20 kg (45
lb)


Forward-Facing:

10-30 kg (22-65 lb) and 69-125 cm (27-49 in.)

- Place car seat forward-facing in the vehicle back seat.
- Make sure UAS strap or vehicle seat belt is routed through the forward-facing belt path marked with an orange label.
- Attach and tighten the tether. When used properly, the tether helps reduce injury in a sudden stop or crash.
- Install this car seat tightly in your vehicle. Car seat **should not move** at the forward-facing belt path more than 2.5 cm (1 in.) from side to side, front to back.

- Harness straps need to be **even with or just above** the top of child's shoulders and chest clip is at **armpit level**.

Experts recommend that children should use the built-in harness system for as long as possible until they reach the maximum forward-facing weight and height for their car seat. This car seat can remain forward-facing using the built-in harness system for children up to 30 kg (65 lb) and 125 cm (49 in.).

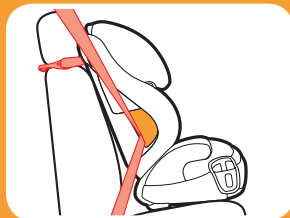

Vehicle Lap/Shoulder Belt with Tether Strap




Vehicle Seat Lap Belt with Tether Strap

3 Forward Facing


3-B Install Forward-Facing with UAS Straps

Review your vehicle's owner manual for UAS location and use. Do not install with the UAS connectors for children weighing more than 20 kg (45 lb)

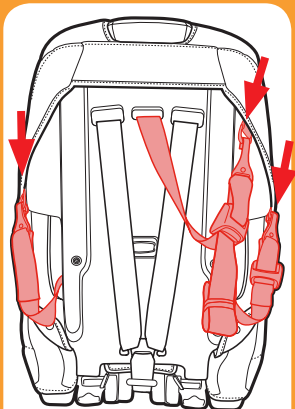

1. Remove UAS and Tether Hook from Storage Locations

Unhook tether and lay it in the seat.

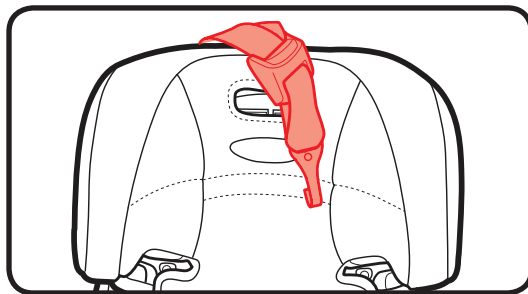


2. Place Car Seat Forward-Facing in Back Seat of the Vehicle



Place forward-facing in vehicle seat. The bottom of the seat should sit as flat as possible on the vehicle seat.

3. Extend the UAS Strap.

For easier installation, extend the UAS strap to its maximum length by pressing the grey button and pull out on the strap.

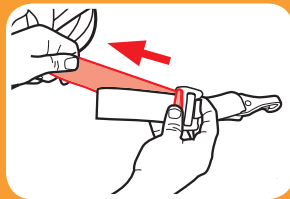


3 Forward Facing

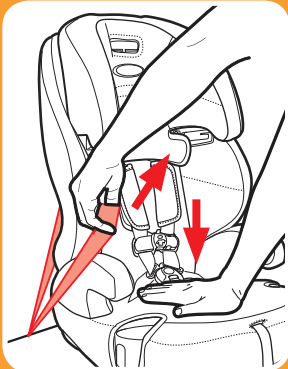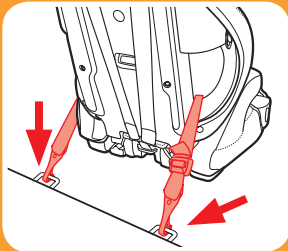

4. Attach UAS to Vehicle's Lower UAS Bars.

UAS strap should not be twisted.

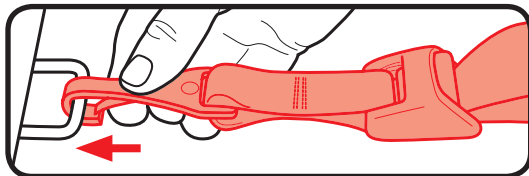


5. Tighten the UAS Strap

Press down firmly in the center of the car seat while tightening the UAS strap.

6. **Attach Top Tether Hook**

Extend the tether by pressing the grey button and pulling out on the strap and attach.

Consult vehicle's owner manual for specific location.

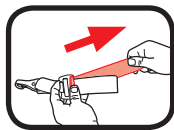

7. **Tighten Tether Strap**



Remove all the slack.

8. **Test For Tightness**

Grab the sides of the seat where the lower anchor strap is and slide the car seat side-to-side and front-to-back.

If the seat moves less than 2.5 cm (1 in.), it is tight enough.

See section 5-A to secure your child.

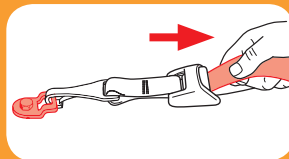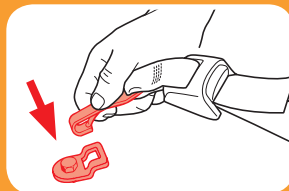


3 Forward Facing

Is Everything Correct?




Car Seat Does Not Move More than 2.5 cm (1 in.) at the Belt Path

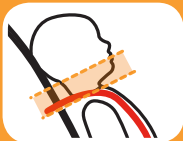

Harness Straps at or Just Above the Child's Shoulders.

Review section 5

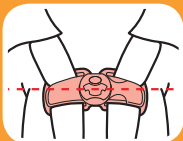

Chest Clip Even With Armpits

Review section 5



Cannot Pinch Harness Straps at the Shoulder


Review section 5

3-C Install Forward-Facing with Vehicle Seat Belt

1. Store UAS Strap


Attach UAS hooks to the plastic rings as shown.

2. Unhook Top Tether Hook From Storage Location and Lay it in the Seat

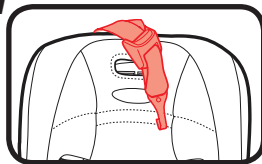

3. Place Car Seat Forward-Facing in Back Seat of the Vehicle


Place forward-facing in vehicle seat. The bottom of the seat should sit as flat as possible on the vehicle seat.

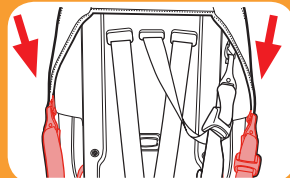

3 Forward Facing

Review your vehicle's owner manual for vehicle seat belt use

**3 Forward
Facing**

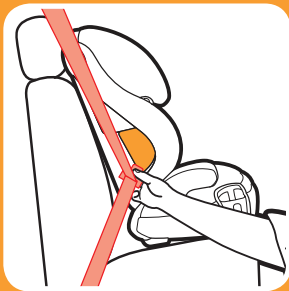

4. Route the Vehicle Seat Belt

Thread vehicle seat belt through the forward-facing belt path (marked with an orange label) and out the other side. Buckle it. The seat belt should lie as flat as possible and not be twisted.

5. Lock the Vehicle Seat Belt




In most vehicles today, slowly pull the shoulder belt all the way out and then let it go back in. You will hear a clicking sound. Slowly pull out on the belt and it should be locked. If not, review your car's owner manual and section 7-D.

6. Tighten the Vehicle Seat Belt

Press down firmly in the center of the car seat. Pull on the shoulder belt to tighten while feeding the slack back in the retractor.





3 Forward Facing

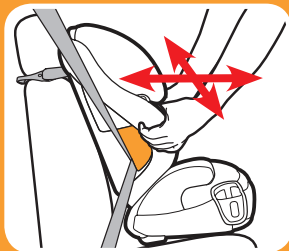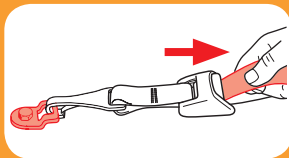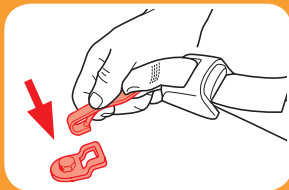

7. Attach Top Tether Strap

Extend the tether by pressing the grey button and pulling out on the strap and attach.

Consult vehicle's owner manual for specific location.

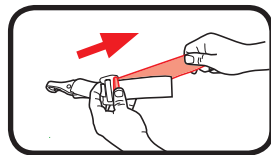

8. Tighten Tether

Remove all the slack.

9. Test For Tightness

Grab the sides of the seat where the vehicle seat belt is and slide the car seat side-to-side and front-to-back.

If the seat moves less than 2.5 cm (1 in.), it is tight enough.

See section 5-A to secure your child.

Is Everything Correct?

Car Seat Does Not Move More than 2.5 cm (1 in.) at the Belt Path

Harness Straps at or Just Above the Child's Shoulders.



Review section 5

Chest Clip Even With Armpits

Review section 5


Cannot Pinch Harness Straps at the Shoulder

Review section 5

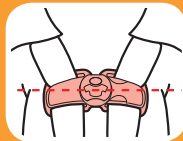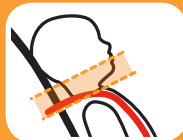


3 Forward Facing

4-A Booster Use

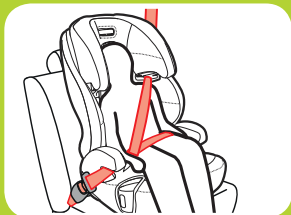

**Vehicle Lap/Shoulder
Seat Belt**

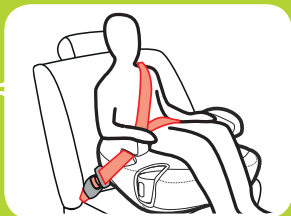

**Vehicle Seat Lap/
Shoulder Belt**

Booster Use With Back:

***18-45 kg (40-100 lb) 110-145 cm (43-57 in.) at
least 4 years old***

Booster Use Without Back:

***18-45 kg (40-100 lb) 110-145 cm (43-57 in.) at
least 4 years old***



- Place car seat forward-facing in the vehicle back seat.
- Make sure vehicle seat's lap belt is adjusted snugly and lays low on the child's hip and is routed in front of the armrest in the booster's belt path.
- Vehicle belts **MUST** lie flat against child and **MUST NOT** be twisted.
- Vehicle seat's shoulder belt is adjusted snugly and should lie between child's neck and edge of shoulder.

- **Never** use a vehicle lap-only belt across front of child.
- **DO NOT** position vehicle shoulder belt under the child's arm or back.
- **DO NOT** allow child to slouch or slide down in the booster seat.
- **DO NOT** position vehicle belt over top of armrests.
- Vehicle's seat headrest **SHOULD NOT** create a gap between vehicle seat and booster seat.
- The front of booster seat **MUST NOT** hang over front of vehicle seat.
- If child will not keep vehicle belt properly positioned, **DO NOT** use this booster seat. Use the internal harness system.

Experts recommend that children should use the built-in harness system for as long as possible until they reach the maximum forward-facing weight and height for their car seat. This car seat can remain forward-facing using the built-in harness system for children up to 30 kg (65 lb) and 125 cm (49 in.).




Never Use a Vehicle Lap-Only Belt Across Front of Child

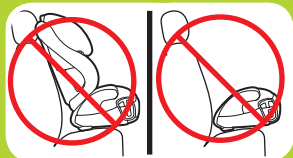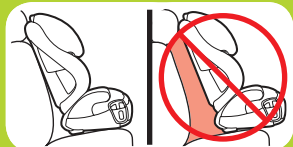

 **4 Booster**


4-B Install Backed Booster

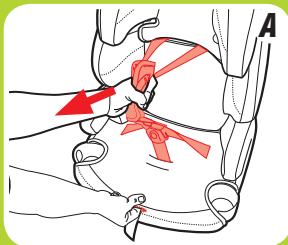

1. Remove The Harness System

A. Loosen Harness Straps

(A) Push down on the harness release lever while pulling out on the harness straps.

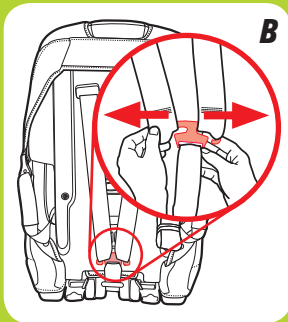


B. Remove Straps From Metal Splitter Plate



Face the rear of the seat and remove the belt straps from metal splitter plate as shown.

C. Remove the Buckle Strap and Harness Straps


From bottom of car seat, rotate metal retainers to side in order to push them through slot easier.

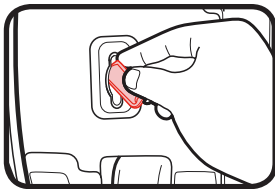



D. Pull Restraint System Out of the Seat

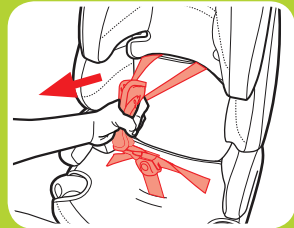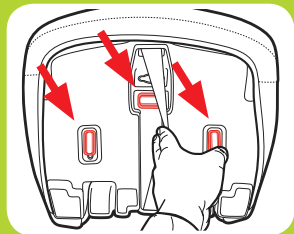

E. Push on Back Support to Release and Remove

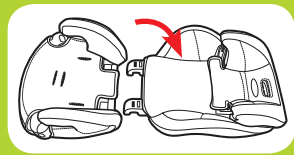

 **4 Booster**

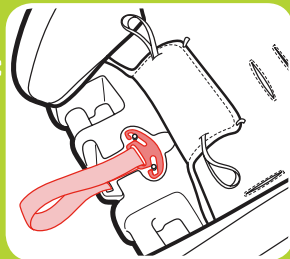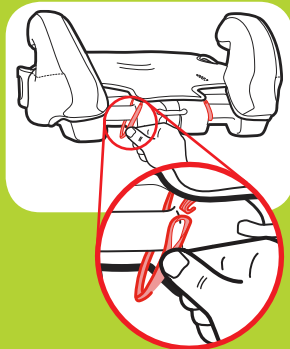

F. Detach Lower Seat Elastic Straps


On the rear of the seat, detach 2 lower seat pad elastic straps from hooks as shown.

G. Store Metal Splitter Plate


On the rear of the seat, lift the flap and fit the splitter plate into the holder. Pull the adjustment strap to tighten in place.

H. Attach Seat Elastic Straps

Attach 2 elastic straps onto the hooks on the rear of the seat as shown.

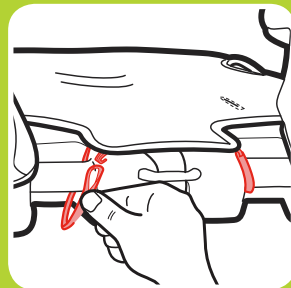


I. Place Seat Back Hooks Into Gutters and Raise Seat Back

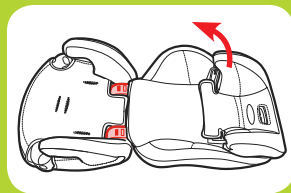



4 Booster



4 Booster

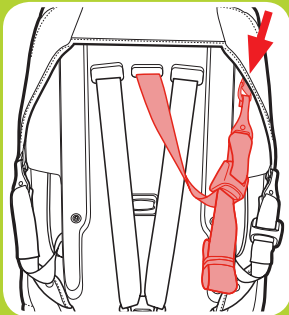


2. Unhook Tether From Storage location and Lay it in the Seat

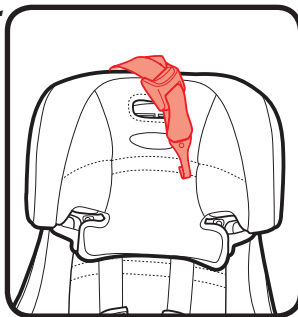

3. Place Car Seat Forward-Facing in Back Seat of the Vehicle

Place forward-facing in vehicle seat. The bottom of the seat should sit as flat as possible on the vehicle seat.

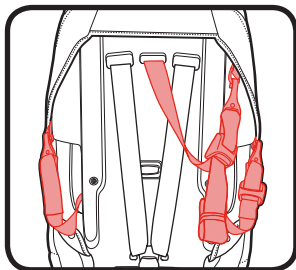

Graco allows the securing of the car seat with UAS system in the booster mode. The child still **MUST BE SECURED** with the vehicle lap/shoulder seat belt. UAS can be used in the booster mode regardless of the weight of the child up to 45 kg (100 lb).

Verify the following before using UAS in the booster mode:

- The UAS hook **DOES NOT** interfere with any vehicle seat belts or buckles.


If the UAS interferes with the vehicle seat belts or if the chosen seating position does not have UAS bars, you **MUST** store the UAS strap. Always secure car seat with UAS or a vehicle seat belt, even

when unoccupied. In a crash, an unsecured car seat can injure passengers.

Skip to Step 9 If Not Using UAS

4. Extend the UAS Strap.




For easier installation, extend the UAS strap to its maximum length by pressing the grey button and pull out on the strap.

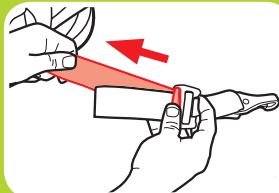

4 Booster




4 Booster

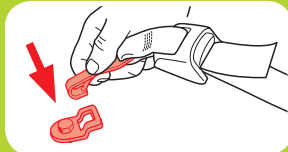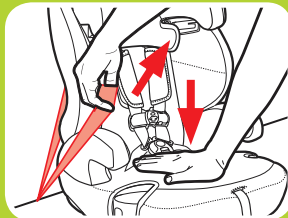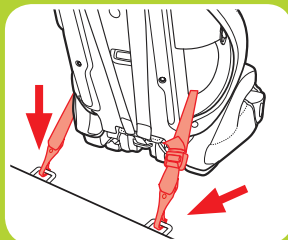

5. Attach UAS Hooks to Vehicle's Lower Anchors.

Lower Anchor strap should not be twisted.

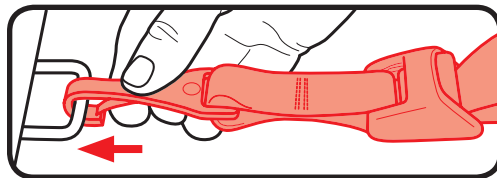


6. Tighten the UAS Strap

Remove all the slack from the UAS strap

7. Attach The Tether


Extend the tether by pressing the grey button and pulling out on the strap and attach.

Consult vehicle's owner manual for specific location.

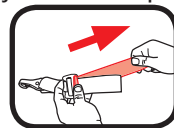

8. Tighten Tether

Remove all the slack.

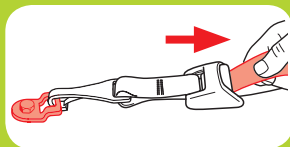


9. Thread the Vehicle Seat Shoulder Belt Through Seat Belt Guide on the Headrest

See section 5-B to secure your child.




4 Booster


4-C Install Backless Booster

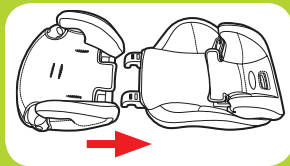

1. *Remove the Back Support*

See section 4-B for instructions on how to remove back support.

Once back support is removed, store with harness straps in a safe place.

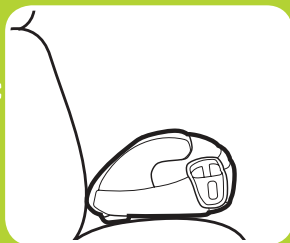

2. *Place the Booster Seat Forward-Facing in the Back Seat of Vehicle*

Place forward-facing on a vehicle seat that has a lap/shoulder seat belt. The base should sit as flat as possible on the vehicle seat.

See section 5-C to secure your child.



! WARNING!

WARNING! Do not put snowsuits or bulky garments on your child when placing them in the car seat. Bulky clothing can prevent the harness straps from being tightened properly. To keep child warm, buckle your child in the car seat and place a blanket around the child or place the child's coat on backwards after buckling in.








5-A Securing Child 5-Point Harness

1. Loosen Harness Straps

(A) Push down on the harness release lever while pulling out on the harness straps at the chest clip.

(B) Unbuckle the chest clip and the buckle strap. **(C)** Place harness straps off to the sides.

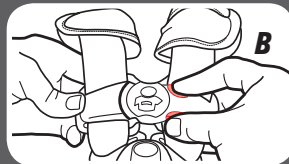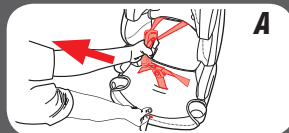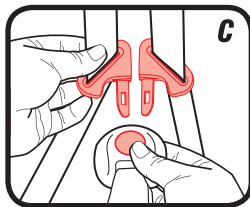

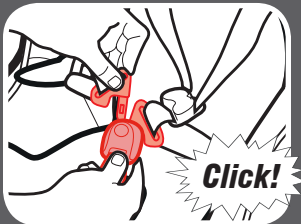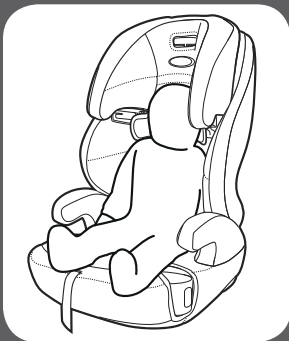

2. Place Your Child in the Seat

Make sure their back is flat against the car seat back.

3. Place Harness Straps Over Child's Shoulders and Buckle


You will hear a “click” when buckle tongues are securely attached. Pull up on each buckle tongue to make sure it is securely attached.

4. Be Sure the Harness Straps Are at the Proper Height


Forward-Facing: Harness straps must be **at or just above** the child's shoulders and top of child's ears must be **below** top of headrest.

5. To Raise or Lower Headrest/Harness


Lift adjustment lever and lift or lower headrest for the proper harness height.

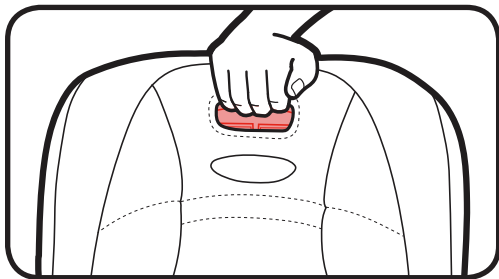

55

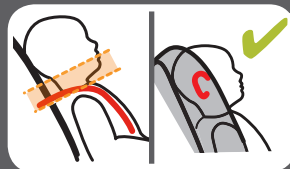




Forward-Facing

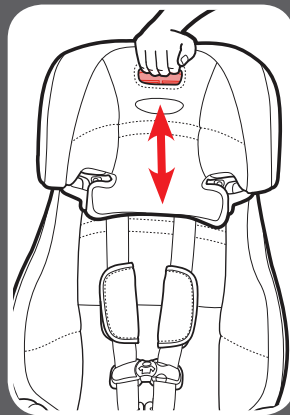

5 Securing
Child



5 Securing Child

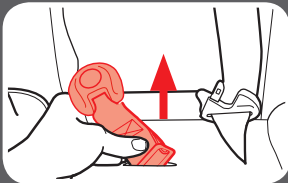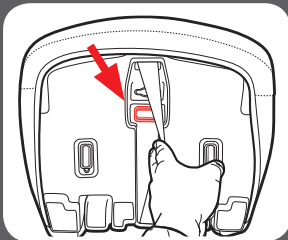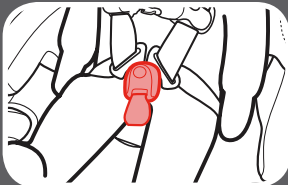

6. Check the Buckle Position

The correct slot the one that is closest to your child without being underneath your child.

7. Remove the Buckle Strap



To change the buckle location, remove the buckle strap from bottom of car seat. Rotate metal retainer to side in order to push it through slot easier.


8. Pull buckle strap from child restraint as shown.

9. Insert Metal Retainer in the New Buckle Strap Slot

Reach underneath the car seat and pull the metal retainer through.


10. Pull Up on Buckle Strap to Make Sure it is Secured

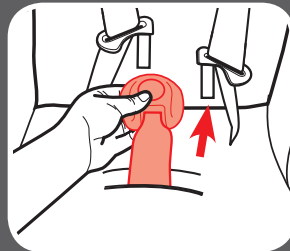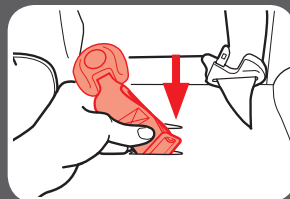

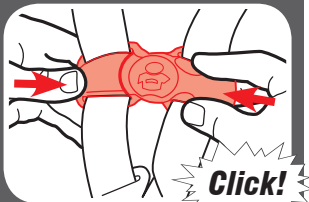

11. Buckle the Chest Clip

You will hear a “click” when the chest clip is securely buckled.

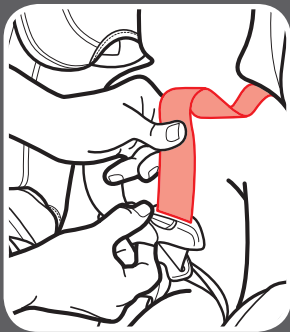

12. Pull All the Slack Out From Around the Waist



Pull up on the harness strap while pushing the chest clip down. Do this to both sides.





13. Tighten the Harness by Pulling the Harness Adjustment Strap

A snug harness should not allow any slack. It lies in a relatively straight line without sagging. It does not press on the child's flesh or push the child's body into an unnatural position.

When you are not able to pinch any of the harness webbing at your child's shoulder, the harness is tight enough.

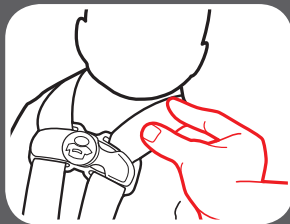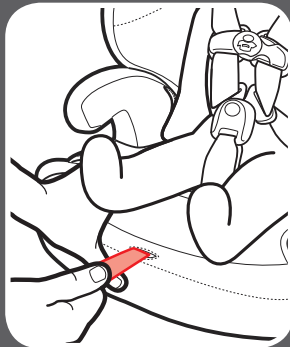

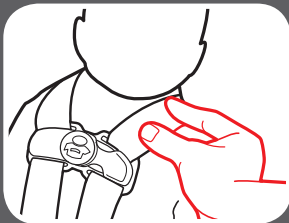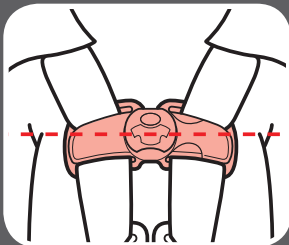

14. Raise the Chest Clip to Child's Armpit Level

15. Check Tightness Again, Tighten More if Needed



5-B Securing Child Backed Booster


!WARNING!



Use only the vehicle lap and shoulder belt system when restraining the child in the booster seat.

1. Place Child In Seat

Have your child sit in the booster seat, with his/her back flat against the back of the booster seat.

2. Thread Vehicle's Shoulder Belt Into Seat Belt Guide in the Headrest

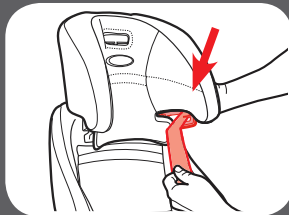

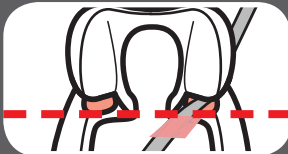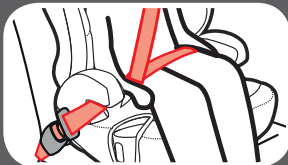

3. Buckle the Vehicle Lap/Shoulder Seat Belt

Be sure the lap portion of the vehicle seat belt goes in front of the armrests.

Be sure the lap portion of the vehicle seat belt lies low across your child's hips.



Be sure the shoulder belt lies across your child's shoulders, between the neck and edge of shoulder. The belt guides should be even with or just above the shoulders.

Is Everything Correct?

Never Use Lap Belt Only


Lap Belt in Front of Armrest and Lies Low Across Hips and Thighs

Shoulder Belt Lies On the Shoulder, Between the Neck and Edge of Shoulders

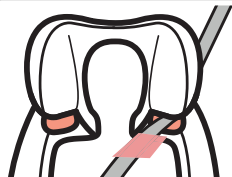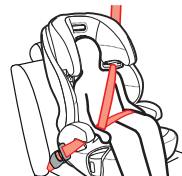



5 Securing Child

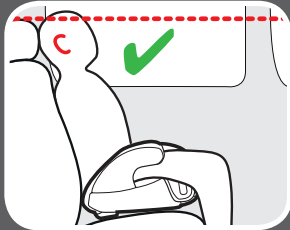

5-C Securing Child Backless Booster

⚠ WARNING!

Use only the vehicle lap and shoulder belt system when restraining the child in the booster seat.

1. Place Child In Seat

Have your child sit in the booster seat, with his/her back flat against the back of the vehicle seat.

2. Ears Must Be Below the Top of the Vehicle Seat Back or Headrest.



3. Buckle the Vehicle Lap/Shoulder Seat Belt

Be sure the lap portion of the vehicle seat belt goes in front of the armrests.

Be sure the lap portion of the vehicle seat belt lies low across your child's hips.

Be sure the shoulder belt lies across your child's shoulders, between the neck and edge of shoulder.

You may need to use the belt positioning clip to help get a good fit. See "Using Belt Positioning Clip"

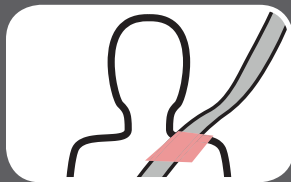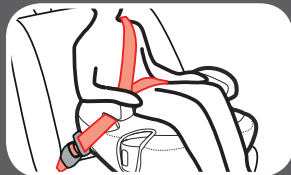



5 Securing Child


Is Everything Correct?



Never Use Lap Belt Only



Lap Belt in Front of Armrest and Lies Low Across Hips and Thighs

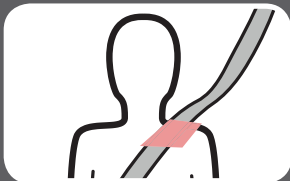




Shoulder Belt Lies On the Shoulder, Between the Neck and Edge of Shoulders



Using Belt Positioning Clip


1. Make Sure Vehicle's Seat Shoulder Belt Lays in the Red Zone As Shown

If the vehicle's seat shoulder belt lays outside this zone, you **MUST** use the belt positioning clip.

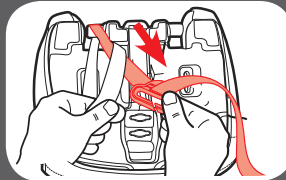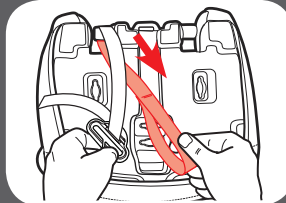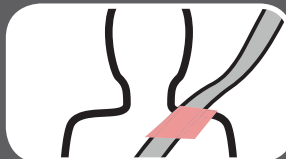

2. To attach clip to booster seat:



There are 2 slots on the back of the booster seat. Choose the slot that is the further away from the vehicle buckle, where the shoulder belt will lie across your child's shoulder. Insert the loop end of the strap through the chosen slot.

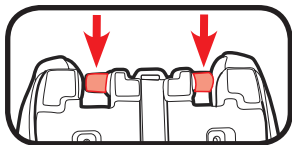

3. Push Clip and Strap Through Loop

Pass the clip and the strap through the loop end as shown and pull strap up.


5 Securing Child


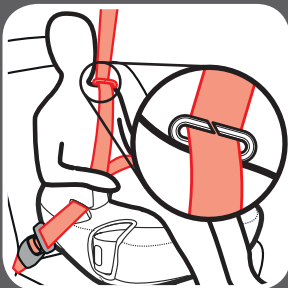
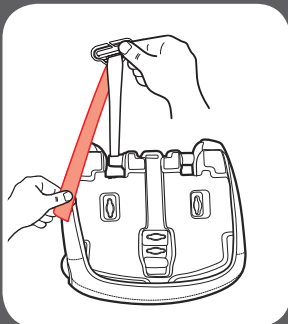


4. Free End of Strap Should Face Front of Seat

5. Place Child in Seat, Buckle Child In Seat and Attach Belt Positioning Clip

With child's back flat against the back of the vehicle seat, buckle child in. Then slide the clip onto the vehicle's seat shoulder belt as shown.

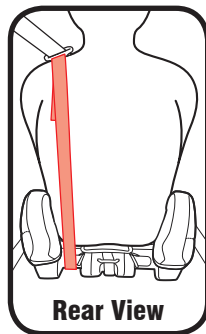

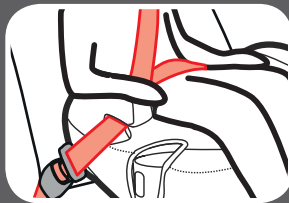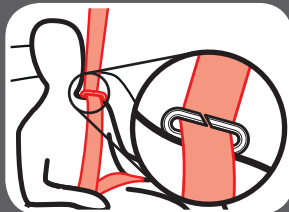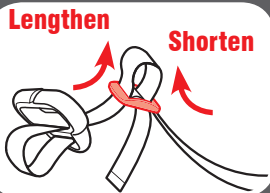


6. *Adjust the Belt Positioning Clip to Fit Your Child*

Lengthen or shorten the belt length as shown.

Clip should fit right at the top of shoulder as shown.

Be sure the lap portion of the vehicle seat belt lies low across your child's hips.


6-A Accessories *(on select models)*

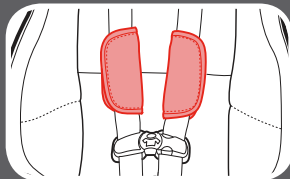

Harness Covers


Make sure that harness covers do not interfere with placement of the chest clip at armpit level.

To remove, undo the fastening strips and remove.

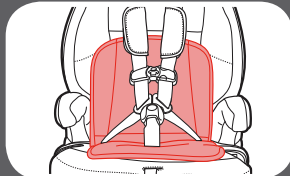

Body Support

To remove, thread buckle through pad.

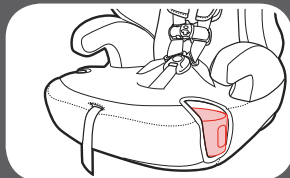

Cup Holder

Refer to section 2-A to install cup holder.

7-A How to Remove UAS and Top Tether




UAS

Press in on the hook's spring. Push hook in, lift hook up, twist and pull out away from anchor point.

Top Tether

To remove, press the grey button and pull out on the strap to release the tension.

Press in on the hook's spring. Push tether hook in, then lift up and pull away from tether anchor.

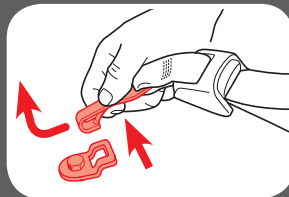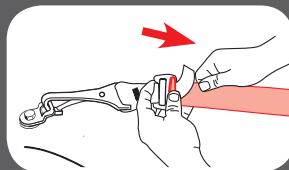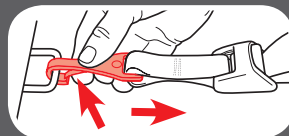

7-B Choosing Vehicle Seat Location

Review your vehicle's owner manual for Seating Locations

The best seating location for this car seat is one that:

- Is recommended by your vehicle owner's manual, and
- Results in a secure installation of this car seat

In the event there is no available back seat and / or you have no other option than to place a child other than in a front passenger seating position, experts recommend that you take the following steps:

- Do not place car seat in front of an active airbag unless you check your vehicle's owner manual for instructions and allowable seating locations.
- Ensure the child is properly restrained according to their age and size
- Move the seat as far back as possible
- Make sure the child is not leaning out of position, such as leaning forward into the deployment path of the air bag
- Set the air bag ON-OFF switch, if available, to the OFF position

7-C Unsafe Vehicle Seat Location

Never install this car seat in any of the following vehicle seating locations:



rear-facing or side-facing vehicle seats



booster mode with vehicle
lap belt only seat belt



7-D Vehicle Seat Belts

Review your vehicle's owner manual for vehicle seat belt use

This car seat can be installed using a vehicle seat belt. To do this, you will need to change the seat belt to a locked mode for use with car seats. With some vehicle seat belts, this is done with the latchplate; with other vehicle seat belts, this is done with the retractor.

Vehicle Seat Belt Terms

Retractor


A device that winds up the unused vehicle seat belt. It is often hidden inside the panels on the walls of the vehicle or in the vehicle seatback.

Latch Plate

The male end of the seat belt with the silver tongue.


Seat Bight

The crease where the vehicle seat back and seat bottom meet.

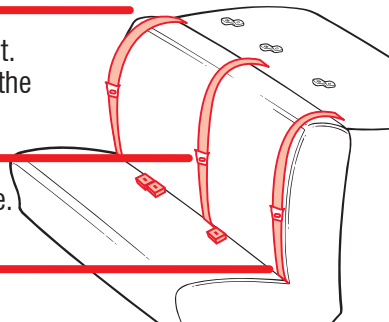


Identify Your Seat Belt Type

There are two different types of vehicle seat belts that can be used with this car seat:

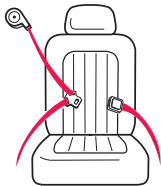

Lap/Shoulder Belt

3 connections points.
Can be used in all car
seats modes of use.

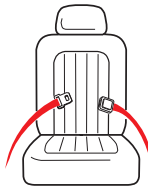

Lap Belt Only

2 connection points. **Can
ONLY be used in built in
harness mode.**

The following types of vehicle seat belts **CANNOT**
be used safely with this car seat:




Lap Belt with Motorized
Shoulder Belt



Lap Belt or Shoulder
Belt Mounted on Door

Belts Forward of the
Seat Bight

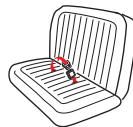

Some vehicles you may not
get a secure fit. Read both your
vehicle and car seat manuals.




Lap/Shoulder Belt Installation - Forward Facing Modes

Always review your vehicle owner's manual for specific information about your vehicle seat belts.

There are three types of retractors: **ELR (Emergency Locking Retractor)**, **ALR (Automatic Locking Retractor)**, and **Switchable (ELR switch to ALR)**. To determine your type of retractor, follow these steps:

1. **Slowly** pull the belt out about halfway and stop.
2. Let the belt retract back several inches.
3. Try to **slowly** pull the belt out more. If the belt cannot be pulled any further, it is **ALR**. If it can be pulled further, go to the next step.
4. **Slowly** pull the belt all the way out, and then allow it to retract several inches.
5. Try to pull the belt all the way out again. If it cannot be pulled out, it is **Switchable**. If it can still be pulled out freely, it is **ELR**.

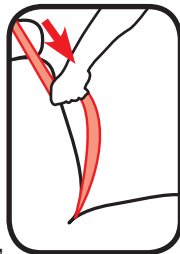

Note: Most vehicles manufactured after 1996 will have Switchable retractors in the back seat. If you have any questions about your retractor type, consult your vehicle owner's manual or call Graco for assistance.


How to Lock Your Lap and Shoulder Vehicle Seat Belt



Sliding Latch Plate and Switchable Retractor

A latchplate that slides freely on the belt webbing and cannot, by itself, hold the belt snug around a car seat.

When installing the car seat, route the vehicle seat belt through the proper belt path and buckle it in. **Slowly pull the shoulder belt all the way out to switch it to locking mode.** Then, as you pull the vehicle seat belt tight, feed all the slack back into the retractor.

Grab the sides of the seat at the belt path and slide the seat side-to-side and front-to-back. The seat should not move more than 2.5 cm (1 in.).

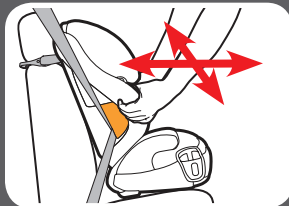

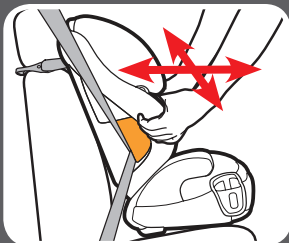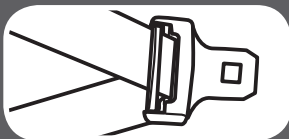

Locking Latchplate and ELR Retractor

A latchplate that holds the lap belt snug after it has been adjusted; contains a metal bar on the underside of the hardware that “locks” the belt in position.

When installing the car seat, route the vehicle seat belt through the proper belt path and buckle it in. Then, pull upwards on the shoulder belt so that the lap belt gets tight around the car seat.



Grab the sides of the seat at the belt path and slide the seat side-to-side and front-to-back. The seat should not move more than 2.5 cm (1 in.).



Sliding Latch Plate and ALR Retractor

A latchplate that slides freely on the belt webbing and cannot, by itself, hold the belt snug around a car seat.

Slowly pull the shoulder belt all the way out. Route the vehicle seat belt through the proper belt path and buckle it in. Then, as you pull the vehicle seat belt tight, feed all the slack back into the retractor.

Grab the sides of the seat at the belt path and slide the seat side-to-side and front-to-back. The seat should not move more than 2.5 cm (1 in.).

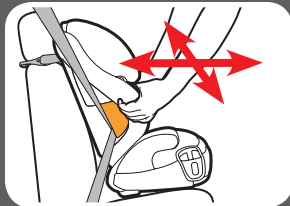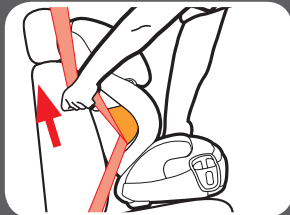

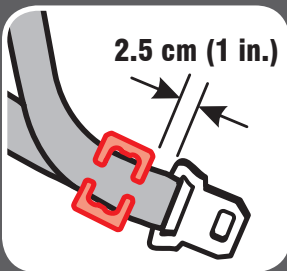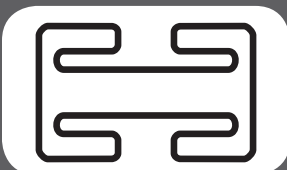

Sliding Latch Plate and ELR Retractor

A latchplate that slides freely on the belt webbing and cannot, by itself, hold the belt snug around a car seat.

With this retractor, you will need to use the locking clip to lock the vehicle seat belt.

Call us at 1-800-345-4109 to order a locking clip.

Route the vehicle seat belt through the proper belt path and buckle it in. Pull the vehicle seat belt tight. While pushing down on seat, pinch the two straps together behind the buckle tongue. Unbuckle the belt without allowing it to slip.

Attach locking clip to lap and shoulder belts as shown.

Rebuckle belt. Check that lap belt does not move by pulling hard. If belt loosens or lengthens, repeat procedure.

Lap Belt Installation - DO NOT use in Booster Mode

Always review your vehicle owner's manual for specific information about your vehicle seat belts.

Locking Latch Plate and No Retractor


When installing the car seat, route the lap seat belt through the proper path and buckle it in. Then, pull upwards on the tail of the belt so that the lap belt gets tight around the car seat.

Sewn On Latch Plate and ALR

Slowly pull the lap belt all the way out. Route the vehicle seat lap belt through the proper belt path and buckle it in. Then, pull the lap belt tight while feeding all the slack back into the retractor.




Grab the sides of the seat at the belt path and slide the seat side-to-side and front-to-back. The seat should not move more than 2.5 cm (1").

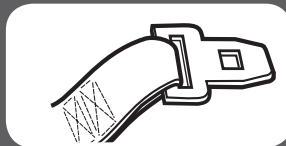

**7 Vehicle
Information**

8-A Cleaning Seat Pad

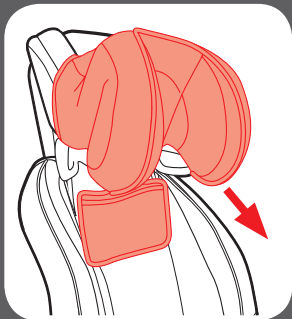

Refer to seat pad care tag for washing instructions.

DO NOT remove foam padding.


Head Support Cover

Clean with a damp sponge using mild soap and cool water. If needed, head support cover may be removed for cleaning.

Remove harness and buckle strap. See section 4-B.

Remove head support cover as shown.

Machine wash cover in cold water on delicate cycle and drip-dry. **DO NOT USE BLEACH.**

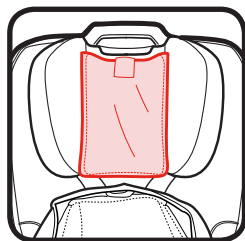

Seat Cover

Clean with a damp sponge using mild soap and cool water. If needed, seat cover may be removed for cleaning.



To remove, unbutton snaps on seat back as shown.

Remove harness and buckle strap. See section 4-B.


Remove seat cover as shown.

Machine wash cover in cold water on delicate cycle and drip-dry. **DO NOT USE BLEACH.**


Reverse the steps to reattach the seat cover.

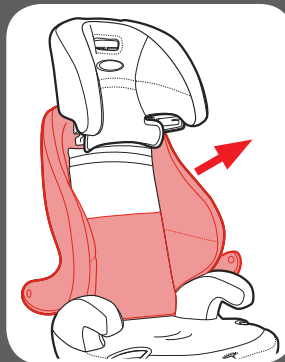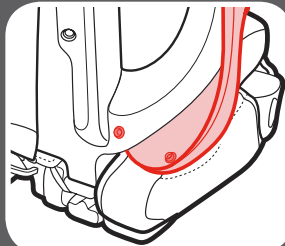


8 Care & Cleaning

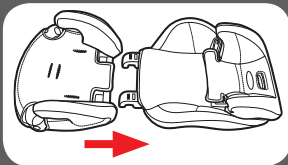

See section 4-B for instructions on how to remove back support.

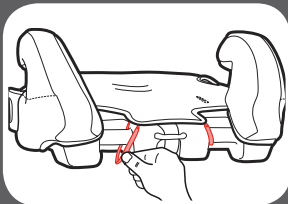

On the rear of the seat, detach 2 lower seat pad elastic straps from hooks as shown.

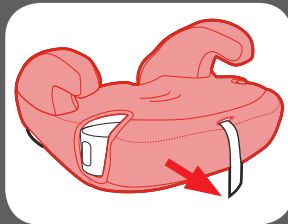

Remove seat cover as shown.

8-B Cleaning Buckle Strap



From bottom of car seat, rotate metal retainer to side in order to push it through slot easier. Pull buckle strap from child restraint as shown.

To clean buckle, place in a cup of warm water and gently agitate the buckle. Press the red button several times while in the water.

DO NOT SUBMERGE THE BUCKLE STRAP. DO NOT USE SOAPS, HOUSEHOLD DETERGENTS or LUBRICANTS.

Shake out excess water and allow to air dry. Repeat steps as needed until it fastens with a click. Re-insert the buckle into the same slot it was removed. Pull up on buckle strap to make sure it is secured.

WARNING! Inspect and clean buckle from time to time to remove any objects or debris that could prevent latching.

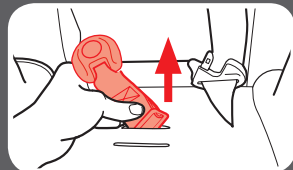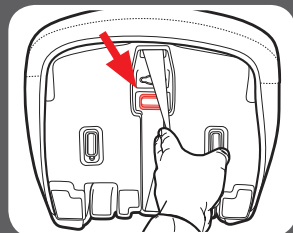



8-C Cleaning Harness and UAS Straps

Surface wash only with mild soap and damp cloth. **DO NOT IMMERSE THE HARNESS STRAPS or LOWER ANCHOR STRAP IN WATER** Doing so may weaken the straps.

If harness straps or lower anchor strap are frayed or heavily soiled, contact Customer Service at www.gracobaby.ca or 1-800-345-4109.

Notes


Replacement Parts

To purchase parts or accessories in Canada, please contact us at the following:

www.gracobaby.ca

or

1-800-345-4109

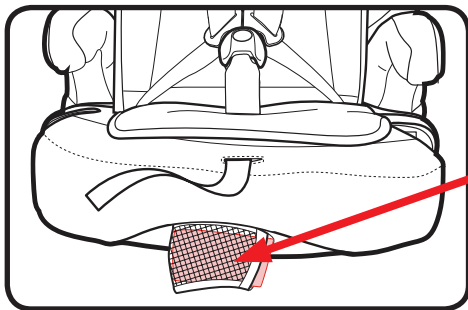

Store instruction manual in
the pouch with the instruction
book icon as shown.